Trend

2 Position Stroller

Instruction Manual

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.


DO NOT USE THE STROLLER IF ANY PARTS ARE DAMAGED.



Cleaning & Maintenance


- Check the stroller for any damages. Check, wheels, and brakes regularly.
- Clean seat and frame with a damp cloth.
- Do not use any decolourant liquids, bleach etc,

Opening the Stroller

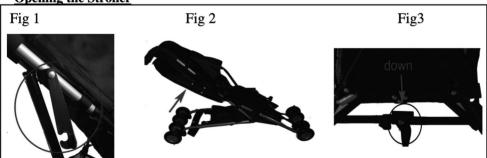


- 1. Undo the folding latch as shown in Fig 1
- 2. Pull up the stroller till is it is up right
- 3. Push down the lock at the centre on the rear of the stroller with your foot , ensuring the lock is engaged

Fixing the front wheel

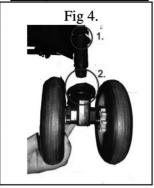


- 1. Hold the wheel with the swivel latch towards you as shown in Fig 4. No 2.
- 2. Ensure the wheel is aligned to the swivel lock gap as shown in Fig 4 . No 1.
- 3. Push the wheel into the front legs ensuring the wheel is locked and both the locking hooks are out when the wheel is pushed through the leg.

Fixing & Using the Canopy the Canopy

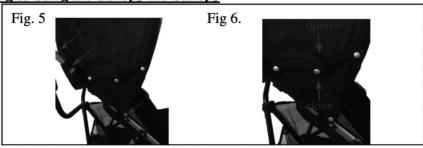

- 1. To fix the canopy follow the illustration of Fig 5.
 - a) Fix the clip above the support as indicated on Fig 5 No. 1
 - b) Fix the velcro straps securely around the frame as shown in Fig 5 No. 2
 - c) Secure the velcro behind the canopy to to back of the seat. Fig 5 No. 3
- 2. To open and close the canopy push up to close on both sides or push down the canopy lever respectively as shown in Fig 6.

Using the swivel function

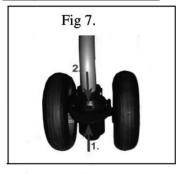

1= swivel latch 2= swivel lock

To lock into swivel function push the swivel latch upwards into the swivel lock. To return to swivel mode push down the swivel latch to release from the swivel lock.

Using the brakes




To activate the brake, push the brake lever down and to deactivate and release the brake push the lever up as shown in Fig 8

Changing the seat positions



To change the position of the seat to upright, secure the fastener's on the belt at the back of the seat. To lower the position of the seat, release the fastener's on the belt as shown in Fig. 9

Folding the Stroller

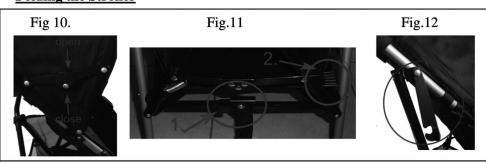

Ensure you fold up the canopy before you fold the stroller as it may

damage the stroller and the canopy (Fig.10) 2.Push the lever above the brake line Fig 11, #1 with your foot and then push down the second lock Fig 11#2 and this should enable you to fold the stroller.

3. Lock the stroller as shown in Fig 12.

WARNINGS!!

WARNING- Never leave your child unattended

WARNING-Keep your child away from the stroller when opening or folding the stroller.

WARNING-Do not use a mattress/pillow with this stroller

WARNING-This stroller is suitable from 6 months and upto a maximum weight of 15 kilos

WARNING- Overloading and carrying additional packages may cause the stroller to become unstable

WARNING-When not it use always keep the brakes engaged

WARNING-This vehicle is designed to carry only one child at a time.

WARNING-Always use the crotch strap in combination with the waist belt.

WARNING-This product is not suitable for running ot skating.

WARNING-Do not load more than 2 kilos of load in the under seat basket

WARNING-Do not close the stroller with the raincover

WARNING- Make sure there is venitalation when the raincover is on.

WARNING-Do not let your baby overheat.

Babyco HA9 0JD

EN-1888-2012