



INSTRUCTION MANUAL

8" 2 in 1 Day Clock

Model: TDC002




Thank you very much for your purchasing the 8" Simple Day Date Clock.
Please read the instructions carefully and keep for future reference

Package contains:

1x 8" Simple Day Date Clock

1x Main Adapter

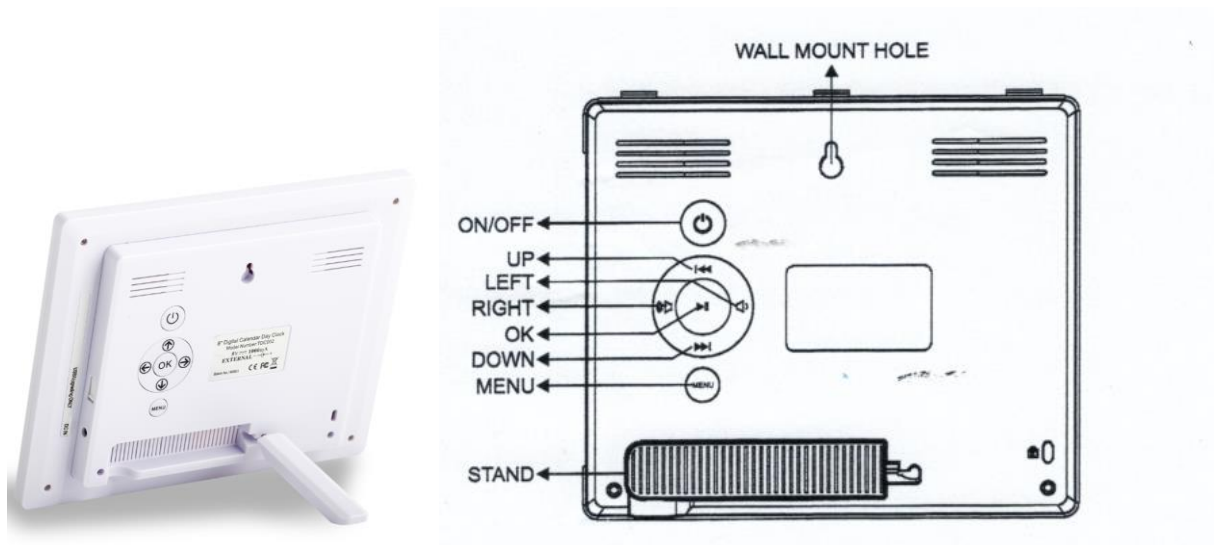

Press Menu button to enter screen menu. Use UP and DOWN button to highlight the line to apply changes. Use LEFT and RIGHT button to underline the text for adjustment. When underlined, use UP and DOWN button to make changes. Press MENU button to close changing mode.

Set Time	07:10AM
Set Date	17-12-2010
Time Mode	12 Hours
Date Mode	Day-Mounth-Year
Language	English
Morning Time Set	08
Afternoon Time Set	12
Evening Time Set	17
Night Time Set	23

MENU

Set Time:

- Press OK button then press LEFT or RIGHT button to underline the hour <07:10> change the hour by using UP or DOWN button.
- Press LEFT or RIGHT button to underline the minutes <07:10> change minutes by using UP or DOWN button.
-

Press Middle button OK to confirm changes and MENU button for exit menu screen

Set Date:

- Before setting date select preferred Date Mode (see description under Date Mode)
- After Date Mode is set press LEFT or RIGHT button to highlight and underline date/month/year. Using UP or DOWN button set correct date/month/year.

Press MENU button to exit from menu screen

Time Mode:

- Choose 24 hours/12 hours option pressing LEFT or RIGHT button

Press MENU button to exit from menu screen

Date Mode:

- Press LEFT or RIGHT button to choose one of two options <Day-Month-Year> OR <Month-Day-Year>

Press MENU button to exit from menu screen

Language:

- Choose preferred language using LEFT or RIGHT button. Possible options English/French/German/Dutch/Italian/Polish/Spanish/Welsh

Press MENU button to exit from menu screen

Morning Time Set:

- Starting from 00:00 (Set preferred time between 00:00 – 12:00)

Select time by using LEFT or RIGHT button

Press MENU button to exit from menu screen

Afternoon Time Set:

- Starting from 12:00 (Set preferred time between 12:00 – 00:00)

Select time by using LEFT or RIGHT button

Press MENU button to exit from menu screen

Evening Time Set:

- Set preferred time between 12:00 – 00:00

Select time by using LEFT or RIGHT button

Press MENU button to exit from menu screen



Night Time Set:

- Set preferred time between 12:00 – 00:00
Select time by using LEFT or RIGHT button
Press MENU button to exit from menu screen

If **TIME SET ERROR** make sure Morning, Afternoon, Evening, Night time are set in preferred times

DISPLAY VIEW

Choose display view by pressing Middle button (OK) to switch between view 1 and 2

1. Displays Day, Time, full date (date, month, year)	2. Displays “Now It’s”
	

Please contact us if you have any feedback

01780 489 100

info@ravencourt.com