

THE MEM-X FEATURES TWO SIDES:

Side 1 is intended for the programmer i.e. the person who sets the MEM-X and the messages.


Side 2 is intended for the user i.e. the person who listens to the messages.

The « programmer's » side

The programmer may be the same as the user or a third party such as a caregiver, a family member for elderly people, a secretary for business people or the parents for children.

Presentation

The components of this side are: a microphone, a button-activated flip top covering an LCD screen and a keyboard for the setting of the MEM-X and the programming of messages. Opening the flip top will allow access to the battery (one AAA 15-day minimum lifetime battery, under normal usage).

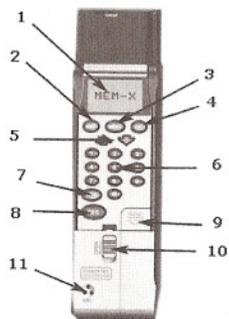

1. LCD screen
2. Exit key
3. Menu key
4. OK key
5. Navigation arrows
6. Digital keyboard
7. SOS key
8. REC key: for recording
9. Battery cover
10. Flip top button
11. Microphone

Use

Press the Exit key (2) any time to cancel an operation and to return to the previous screen

The screen automatically shuts off if it remains idle for 1 minute.

1)Turning on the appliance

Press the Menu key (3) for 3 seconds to activate the MEM-X.

The screen turns on and displays:

- the date and the time
- the battery status

2)Composition of the Menu

Turn on the MEM-X

Press the Menu key (3) to access the main menu.

Scroll down the menu using the navigation arrows (5)

The main menu is composed of:

- "New Message ?" for message programming
- "Message List ?" to access the list of messages
- "Time Setting ?" to set the date and the time
- "SOS Message ?" for emergency message
- "Voice Volume ?" to set the volume level of the messages
- "Ring Volume ?" to set the volume level of the alarm
- "Ringing Tone ?" to set the alarm tone

For the first activation of the MEM-X, go directly to the "Time Setting" menu to set the date and the time.

3) Setting

Press the MENU key (3) to access the main menu.

Select "Time Setting" using the arrows (5) and press the OK key (4)

"DD/MM'YY" appears on the screen

Enter directly the date: day/month/year using the digital keyboard (6)

Click on the OK key (4) to validate or press on the menu key to erase the data and start over

"TIME" appears on the screen

Enter directly the time using the digital keyboard (6)

By default, the letters "AM" appear on the right hand side to indicate morning time, use the arrows (5) to change it to "PM" if you need afternoon time.

Press the OK key (4)

The date and the time are set

The screen displays the newly-entered day and time

Repeat the same process to change the data

NOTE:

By default, time is displayed in a 24-hour format, and the date is displayed: day/month/year. Read the instructions 10) and 11) in this manual if you wish to change the time format.

You cannot validate data if you are not in the right format, you will have to change the format and start over.

4) Message Programming

With the MEM-X you can program 3 types of messages:

-Single-use messages

-Daily messages for 1 week, 2 weeks, 1 month or 3 months

-Weekly messages

Single-use messages

Go to the main menu and select "New Message ?"

Press the OK key (4)

"Date", followed by "DD/MM'YY", appears on the screen

Enter then the desired date for the message using the digital keyboard (6)

Press the OK key (4)

"Time", followed by "HH: MM", appears on the screen

Enter the desired time for the message alarm using the digital keyboard (6)

Press the OK key (4)

"Pls hold REC key" appears on the screen

Press and hold down the REC key (8) to start recording the voice message

"REC" flashes on the top left side of the screen and "Remain" and a time counter appear to indicate the available space

Release the REC key (8) to stop recording

The message is then automatically replayed

At the end of the replay, the screen returns to the "New Message?" menu and the message is stored.

Daily messages

Go to the main menu and select "New Message?"

Press the OK key (4)

"Date", followed by "DD/MM'YY", appears on the screen

Scroll down the replay times of the daily message using the navigation arrows (5)

"Duration" followed by "1 week", "3 weeks", "1 month" and "3 months" appears successively on the screen

Select the desired duration by pressing the OK key (4) when it appears on the screen

"Time", followed by "HH: MM", appears on the screen

Enter the daily replay time of the message alarm using the digital keyboard (6)

Press the OK key (4)

"Pls hold REC Key" appears on the screen

Press and hold down the REC key (8) to start recording the voice message

"REC" flashes on the top left side of the screen and "Remain" and a time counter appear to indicate the available space

Release the REC key (8) to stop recording

The message is then automatically replayed

At the end of the replay, the screen returns to the "New Message" Menu and the message is stored.

Weekly messages

Go to the main menu and select "New Message?"

Press the OK key (4)

"Date", followed by "DD/MM'YY", appears on the screen

Scroll down to the desired day of the week using the navigation arrows (5)

"Every", followed by "Sunday", "Monday", "Tuesday", "Wednesday", "Thursday", "Friday", and "Saturday" appears successively on the screen

Press the OK key (4) to select the day

"Time" followed by "HH: MM" appear

Enter the desired time using the digital keyboard (6)

Press the OK key (4)

"Pls hold REC Key" appears on the screen

Press and hold down the REC (8) to start recording the voice message

"REC" flashes on the top left side of the screen and "Remain" and a time counter appear to indicate the available space

Release the REC key (8) to stop recording

The message is then automatically replayed

After the replay, the screen returns to the "New Message" menu and the message is stored.

This type of message can only be erased manually

5) Handling the recorded messages

This menu option allows access and handling (listening, erasing and replacing) of all the programmed messages stored.

Storing messages

Go to the main menu

Select "Message List?" and press the OK key (4)

A message counter, the type of message, the alarm time and the date, duration and day of the week of the message appear

Using the arrows (5), scroll down the messages by category: "Date" for the single-use messages, "Week" for the daily messages and "Weekday" for the weekly messages

Every category has its own message counter

As you scroll down, you will reach first the single-use messages, then the daily messages and the weekly messages

Handling the messages

Select the desired message and press the OK key (4)

Scroll down the message handling menu using the arrows (5) and:

-Listen to the message by selecting "Listen" and pressing the OK key (4)

The message will be replayed

At the end of the replay, the screen returns to the message handling menu

-Replace the message by selecting "Replace" and pressing the OK key (4)

You need to renew the recording by repeating the same operation as in the previous recording. Once the message is replaced, there will be no automatic replay and the screen will return to the message handling menu

6) SOS Message - Emergency Message

Explanation

An option from the main menu allows the recording of an emergency message. The objective of this message is to inform a third party in case of an accident (such as a road accident, a loss of consciousness or memory...) to the holder of the appliance.

Recording the message

Go to the main menu

Select "SOS Message ?" and press the OK key (4)

If no emergency message is recorded, the screen displays "SOS Mess Record?"

Press the OK key (4)

"Pls hold REC play" appears on the screen

Press and hold down the REC key (8) to start recording the voice message

"REC" flashes on the top left side of the screen and "Remain" and the time counter appear to indicate the available space

Release the REC key (8) to stop recording

The screen returns then to the emergency message handling menu (listen, erase, replace)

Handling the emergency message

Go to the main menu

Select "SOS Message ?" and press OK (4)

You access then the message handling menu

The screen displays "SOS Mess Listen?"

Scroll down the menu using the arrows (5) and:

-Listen to the message by selecting "Listen" and pressing OK (4)

The message will be replayed

After the replay, the screen returns to the message handling menu

-Erase the message by selecting "Erase" and pressing OK (4)

Renew the recording by repeating the same operation as in the previous recording. When the message is replaced, there will be no automatic replay and the screen will return to the message handling menu.

Using the message

The message can be heard at any time

Press the SOS key (7) to activate the message.

7) The Message volume

With the MEM-X the volume level of the messages can be set in a scale of 1 to 8

Go to the main menu

Select "Ring Volume ?" and press OK (4)

"VoiceVol Level [*]" appears on the screen. *corresponding to the current volume from 1 to 8

Set the volume between 1 and 8 using the navigation arrows (5)

Press the OK key (4) to validate

The screen returns to the time and date initial display

8) The Alarm volume

With the MEM-X the volume level of the alarm can be set in a scale of 1 to 8
Go to the main menu
Select "Ring Volume?" and press OK (4)
"RingVol Level [*]" appears on the screen *corresponding to the current volume from 1 to 8
Set the volume between 1 and 8 using the navigation arrows (5)
While the volume is being modified, the alarm can be heard with the new volume level Press the OK key (4) to validate
The screen returns to the initial time and date display

9) The Alarm tone

With the MEM-X you can choose among 5 different alarm tones

Go to the main menu
Select "Ringing Tone?" and press OK (4)
"Tone Music [*]" appears on the screen. * corresponding to the ring number
Scroll down the different tones using the navigation arrows (5), the rings can be heard
Press the OK key (4) to enter one of the tones
The screen returns to the initial date and time display

10) Time Display Format

The MEM-X gives you two options for time display: a 12 hour-format and a 24-hour format.
The message "Time in 24-Hour" corresponds to the 24-hour display format.
The message " Time in 12-Hour" corresponds to the 12-hour display format.

Get into the main menu
Once you see "Time Format" click on the OK key (4)
The current display format "Time in 24-Hour" or "Time in 12-hour" appears on the screen
Click on the OK key (4) to keep that format
The screen goes back to time display

To change, click on the arrow (5)
The other format, "Time in 12-Hour" or "Time in 24-Hour" comes up as an option
Click on the OK key (4) to validate the new format
The screen goes back to time display

11) Date Display Format

The MEM-X gives you two options for date display: Day/Month/Year or Month/Day/Year.
The message "Date in DD/ MM'YY" corresponds to the date display format Day/Month/Year.
The message "Date in MM/ DD'YY" corresponds to the date display format Month/Day/Year.


Get into the main menu
Once you see "Date Format" click on the OK key (4)
The current display format "Date in DD/ MM'YY" or "Date in MM/ DD'YY" appears on the screen
Click on the OK key (4) to keep that format
The screen goes back to time display.

To change, click on the arrow (5)
The other format, "Date in DD/ MM'YY" or "Date in MM/ DD'YY" comes up as an option
Click on the OK key (4) to validate the new format
The screen goes back to time display

The « user's » side

Presentation

It is the simplest. It is only composed of a blue key (1), a loudspeaker (2) and an audio jack for the headset (3)

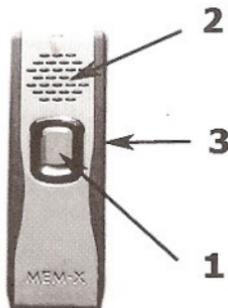

Use

When the date and the time are up for a recorded message, the MEM-X rings. The user should then press the blue button (1) to stop the alarm and listen to the message.

The message can be heard through the loudspeaker (2), a headset or earphones plugged into the audio jack (3). The message can be replayed as often as the user wishes, until the next message.