




# MemoryPlus 319i ph

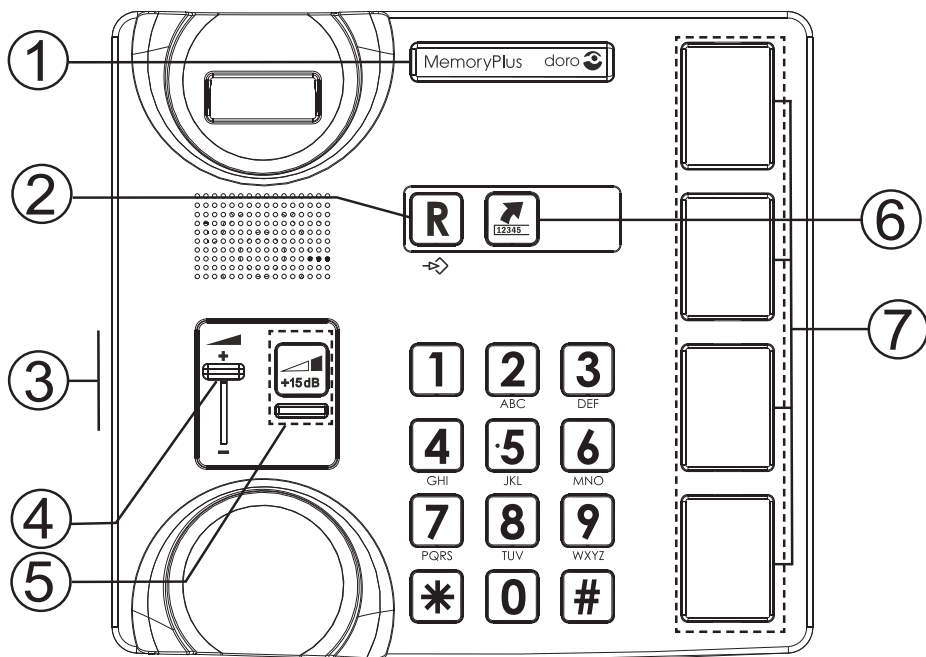

## English

- |                             |                        |
|-----------------------------|------------------------|
| 1. Ringer indicator         | 5. Volume Boost        |
| 2. Flash button/programming | 6. Redial function     |
| 3. Tone control             | 7. Speed dial memories |
| 4. Volume control           |                        |

## Français

- |  |                                  |
|--|----------------------------------|
| 1. Témoin de sonnerie                            | 5. Amplification du volume       |
| 2. Touche R et de programmation                  | 6. Touche Bis                    |
| 3. Curseur de réglage de la tonalité             | 7. Touches des mémoires directes |
| 4. Curseur de réglage du volume d'écoute combiné |                                  |

## Svenska

- |                          |                      |
|--------------------------|----------------------|
| 1. Ringindikator         | 5. Volymförstärkning |
| 2. R-knapp/programmering | 6. Återuppringning   |
| 3. Tonkontroll           | 7. Snabbval          |
| 4. Volymkontroll         |                      |

## **Norsk**

1. Ringeindikator
2. R-knapp/programmering
3. Tonekontroll
4. Volumkontroll
5. Volumforsterker (Boost)
6. Repetisjon
7. Hurtigtaster

## **Dansk**

1. Ringeindikator
2. R-tast/programmering
3. Genopkald
4. Toneregulering
5. Volumforsterker (Boost)
6. Lydstyrkeregulering
7. Hurtigvalg

## **Suomi**

1. Soiton merkkivalo
2. R-painike/ohjelmointi
3. Uudelleensoittaminen
4. Äänen sävyn säätö
5. Voimakas vahvistus
6. Äänenvoimakkuuden säätäminen
7. Pikavalinta

## **Deutsch**

1. Optische Rufanzeige
2. R-Taste/Programmierung
3. Klangeinstellung
4. Lautstärkeinstellung
5. Lautstärkeanhebung +15dB
6. Wahlwiederholung
7. Direktwahlkosten (Foto einlegen möglich)

## **Español**

1. Indicador de llamada
2. Tecla R/programación
3. Control de tonos
4. Control de volumen
5. Amplificación potente
6. Rellamada
7. Marcación rápida

## **Italiano**

1. Indicatore suoneria
2. Tasto flash/programmazione
3. Regolazione toni
4. Regolazione del volume
5. Amplificazione extra
6. Richiamata
7. Composizione rapida

## **Nederlands**

1. Beltoonindicator
2. Flash-toets/programmeren
3. Terugbellen
4. Toonregeling
5. Krachtige versterking
6. Volumeregeling
7. Snelkeuze


## Operation

### Making a call

Regular dialling

1. Pick up the handset.
2. Enter the desired number.

### Redial function

If a number was previously engaged or if you wish to redial the most recently entered number, pick up the handset and press the redial button .

### Memories

This telephone has 4 speed dial memories.


Once a number has been saved in a memory location, you only need to press one button to make the call. A picture or symbol can be placed under the transparent cover on the speed dial buttons so it is easy to see who you are calling.

Dialling with speed dial

1. Pick up the handset and wait for the dialling tone.
2. Select required speed dial by pressing on the appropriate button.

### Volume control

This product can adjust the sound in a number of ways:

 Normal volume control for the handset (under the handset).



Press the button (under the handset) to activate Volume Boost. The LED indicator will light up.

Volume Boost is normally deactivated at the end of each call to avoid harming people with normal hearing. This safety function is adjustable, see *Technical Information*.





Change frequency range/sound level and quality (on the left side). PLEASE NOTE! Only works when the powerful amplification is active.

## Settings





This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE.


### Connection

1. Connect the telephone cord to a telephone network wall socket and to the  socket on the back of the telephone.
2. Connect the spiral cord to the handset and to the  socket on the base of the telephone. See *Technical Information* (6).
3. You will hear a click when the modular plug is correctly in place.
4. Set correct **Flash (R)** button time to 100. See *Technical Information* (4).
5. Lift the handset and listen for the dial tone.

### Memories

#### Saving speed dial numbers


1. Make sure that the **R**/ switch on the base of the telephone is set to . See *Technical Information* (5).
2. Lift the receiver and press  (**R**) (ignore anything you hear in the earpiece).
3. Enter the phone number (up to 16 digits) using the keypad. Press  (**R**).
4. Select memory position by pressing the corresponding button.
5. Replace the handset. The number has now been saved.

Remember to return the **R**/ switch on the base of the telephone (5) to the **R** position when all the telephone numbers have been saved.

Press  if you want a pause in the telephone number.

## Technical Information

There are several switches on the underside.

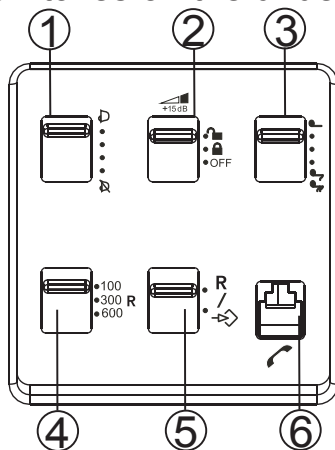

### 1. Ring volume



### 2. Volume Boost (high amplification)



Standard setting. The Volume Boost is set to switch off after every call.



Volume Boost stays permanent switched on. This setting should only be activated if all users have impaired hearing and require powerful amplification.

**OFF** Volume Boost deactivated.

### Warning!

The handset volume can be very loud with Volume Boost. Volume boost should only be used by persons with impaired hearing.

### 3. Ring tone



### 4. Flash button time (100/300/600)

100 is the standard setting for most countries. 300 for France/Portugal. 600 for New Zealand.

## Hearing loop

The handset has a built-in hearing loop for those who wish to use their hearing aids while using the telephone. Select the **T** mode on your hearing aid to enable this feature.

## Others

### Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment. Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please report this to your network operator. If you are still experiencing difficulties, contact the place of purchase.

### Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. If you experience any problems please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee shall not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage or any other circumstances on the purchaser's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the telephone during a thunderstorm.

### Declaration of conformity

Doro hereby declares that the product Doro MemoryPlus 319i ph conforms to the essential requirements and other regulations contained in the directives 1999/5/EC (R&TTE), 2002/95/EC (ROHS).

A copy of the manufacturer's declaration is available at [www.doro.com/dofc](http://www.doro.com/dofc)