


Congratulations, you have our latest Digital 8" Calendar Day Clock with a Clear Easy to Read - Day, Time and Dte display in a choice of 15 built-in languages.

Connect and Plug-in the supplied Power Adapter. After a few seconds the screen will automatically display in the selected setup language. To make any changes to the display press the MENU button follow these instructions.

To make changes: Select the Line number using the Up or Down Buttons to Highlight Line between < > to change number settings (only when it is underlined) using the left or right buttons to select then use the Up and Down buttons to adjust. Press OK to confirm the selected settings.

Please Note: Only the line highlighted with < > can be adjusted.

Line 1, -  **Language.** Select from: ENGLISH - FRANCAIS - DEUTSCH - ITALIANO
ESPANOL - PORTUGUES - NEDERLANDS - POLSK - .SUOMI - GREEK - HEBREW
NORSK - RUSSIAN - SVENSKA - CYMRAEG

Line 2, - **Set Time.** (Reset clock in - 24 hour mode: i.e. 15 hours = 3 p.m.)

Line 3, - **Set Date.**

Line 4, - **Advanced.** (3 or 4 Line Display)

Line 5, - **Time Mode.** (12 hour shows a.m./p.m. or 24 hour Display)

Line 6, - **Date Display.** (DD / MM / YY or MM / DD / YY)

Line 7, - **Display Style.** (Colour / Black & White / Black / White)

Line 8, - **Night Time Dimmer.** (1 dim to 8 Bright)


Line 9, - **Day Time Dimmer.** (1 dim to 8 Bright)

Please Note: This Digital Clock is Not Battery Operated It must be connected to a power supply to operate. Button should be pressed and released quickly, (Not held Down) the MENU has Auto cut off after 15 Seconds. USB is (Not for consumer use) for Upgrade ONLY.

12 Month Guarantee and Support by:

Dayclox Ltd. (www.dayclox.com)

155, High Street, Rhyl. L118 1UF - UK.

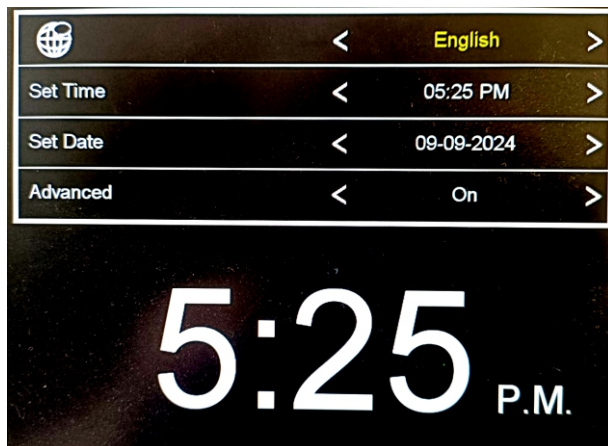

If your clock screen has an Anti-Scratch protective plastic cover, please peel off to remove it.