

## **DIGITAL AMMETER 1.999A**

A 9V battery of the 6LR61 (PP3) type is required to operate this instrument. Access to the battery compartment is obtained by removal of the four screws on the top panel which secure the battery compartment cover. When fitting the battery, care should be taken to ensure correct polarity.

Low battery condition is indicated by the LOBAT symbol being displayed.

The meter is protected from overload by an automatically resetting fuse. When current overload has occurred, remove the overload and allow the meter to stabilise for 30 seconds before taking further readings.

Remove the battery if the meter is not to be used for long periods.