
- -> Drive new shaft seal -arrow- into housing onto stop with press piece VW 423.

2 - Adjusting and checking selector mechanism

2.1 - Adjusting and checking selector mechanism

· Gearbox in neutral.

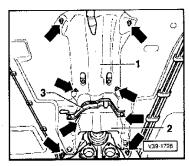


Adjusting gear stick


Remove exhaust system parts behind catalytic converters

=> Avant RS2; Repair group 26; Removing and installing parts of exhaust systemRemoving and installing parts of exhaust system

- -> Remove heat shield -2- -arrows-. Remove gear stick knob and gear stick cover.

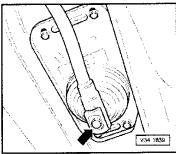


-> Slacken securing bolt -arrow- for selector rod.

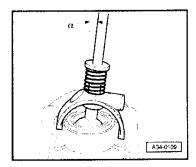

- Adjust gear stick as follows:
 - -> Gear stick at an angle of5°to the right (angleα)

Note:

The illustration shows the gear stick from behind (looking towards the front of the vehicle).

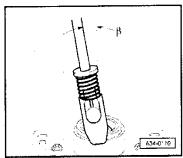

-> Gear stick at an angle of $7^{\circ}to$ the rear (angleβ)

Note:

The illustration shows the gear stick from the right.

- Hold gear stick in this position (second mechanic required). Tighten selector rod bolt below vehicle to 23 Nm.

Note:

The gear stick must remain in the same position while the bolt is being tightened.

2.2 - Checking gear stick setting

- Check operation of 1st and 2nd gear stop.

 Engage 2nd gear and push gear stick to the left against the stop.

 Reduce pressure on gear stick until it moves back to pressure point.

 Spring-back measured at gear stick knob: 3 ... 5 mm
- Check that all gears can be engaged.

gear lock to the 3rd/4th gear plane

- Check operation of reverse gear lock. It must be possible to move the gear stick, without pushing and without force, forwards from the reverse
- If the gear stick setting is incorrect it can be adjusted as follows:
- Slacken bolts for ball housing.
- With gear stick pressed downwards, move it to the left as far as the reverse gear stop in the gearbox, and hold it in this position.
- Push the ball housing to the right against the gear stick.
- Hold gear stick in this position and tighten ball housing bolts.
- Install gear stick cover and knob.
- Alignexhaust system free of stress
- => Avant RS2; Repair group 26; Aligning exhaust system free of stressAligning exhaust system free of stress