


Parts List, Installation and General Information

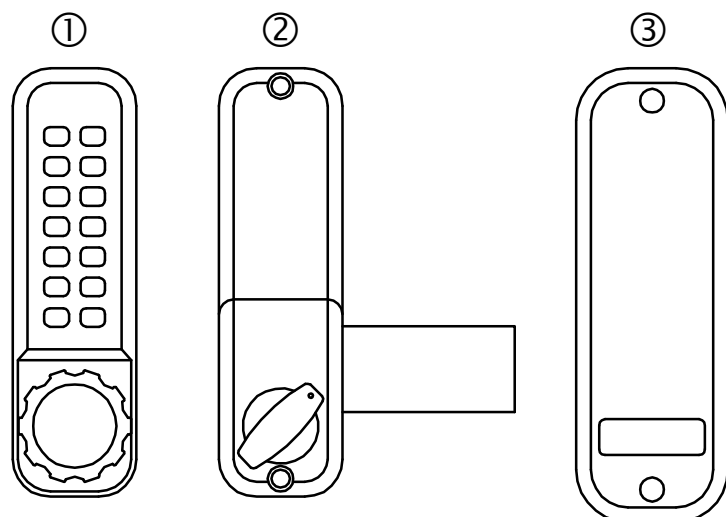


BL 2605 MG Pro



PARTS LIST

Please make sure you have received all the following parts:


- (1) Keypad
- (2) Inside lock body
- (3) Neoprene seals x 2
- (4) Spindle
- (5) Surface lock keep
- (6) Morticed lock keep
- (7) Wood screws x 8
- (8) Tweezers (For changing the code)
- (9) Fixing Bolts. 2 supplied
- (10) Spare tumblers. 2 x Coded
2 x Uncoded
- (11) Code card

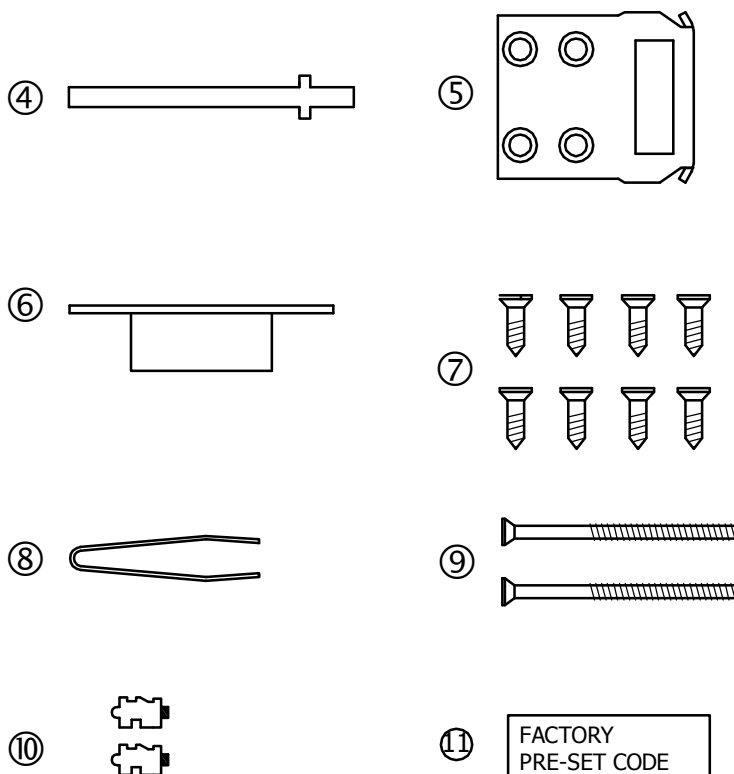

SPECIAL NOTES


Before commencing installation check that all parts are working correctly: Press the code card according to the code card and then the knob should turn and return easily under spring pressure. If you intend to change the code, you should do it before installing the lock, See the code change instructions.

CHECK THE HAND OF YOUR DOOR

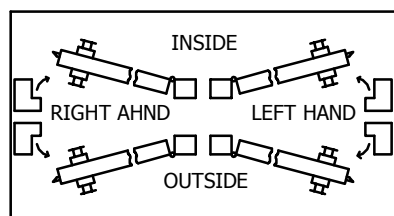

Your door is right-handed, if viewed, from the outside the hinges are on the right.

CHANGING THE HANDING OF THE UNIT

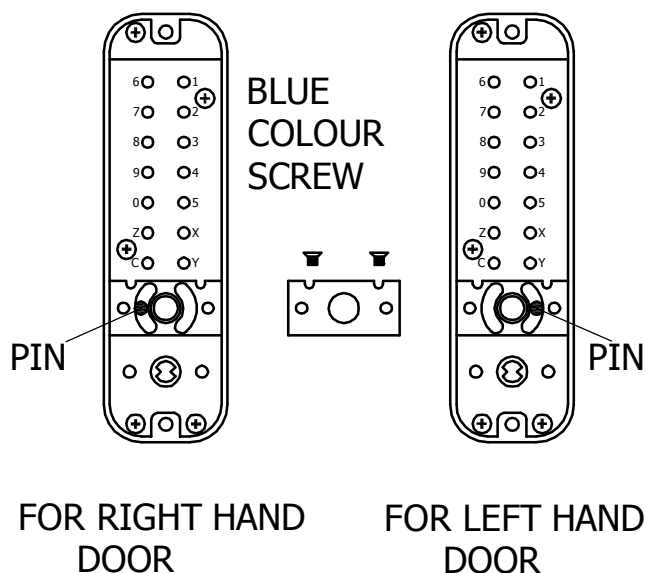


HOW TO CHANGE YOUR CODE NUMBER

- 1) Remove the lock from the door .
- 2) Remove the 2 retaining screws from the back of the keypad. Take EXTRA care to keep the keypad on a flat surface, when you are removing the covering plate, because there are a lot of small components inside.
- 3) You will now see that there are 5 red coloured coded tumblers & 8 blue coloured uncoded tumblers plus 1 clear tumbler ('C' button).
- 4) To change your code, push the 'C' button down and hold it. You can then easily remove one or more of your coded & uncoded tumblers, using the tweezers supplied.

Remember, the red tumblers represent coded digits and the blue tumblers represent non-coded digits

- 5) Please note you should NEVER remove the 'C' tumbler.
- 6) Please note the different shapes of tumblers, before reinserting them into the lock body. Firstly there is a difference in shape between the coded & uncoded tumblers, illustrated below. And secondly when refitting the tumblers into the lock body, they must be fitted facing the right way, again see the illustration Below. (All square cutouts must face outwards)
- 7) After you have refitted the tumblers and made a note of the new code, please replace the metal plate with the 2 screws
- 8) PLEASE NOTE. With the spare tumblers provided, you can either increase the number of digits in your code to 6 - 7 or reduce to 3 - 4.

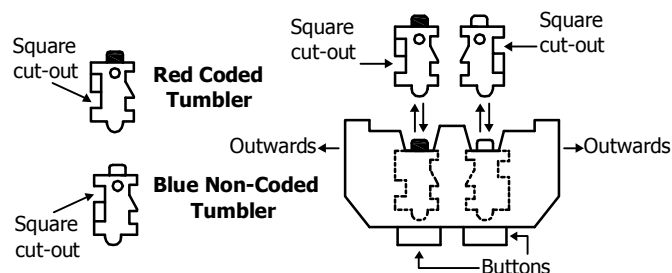



If you experience any problems when fitting this lock or changing the code please contact the:

Borg Locks Helpline


+44 (0) 1708 225700

Dismantling the lock will invalidate your warranty

Assembling and Fitting

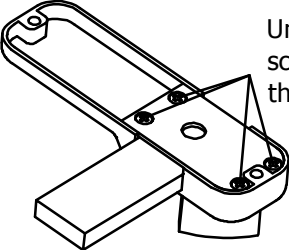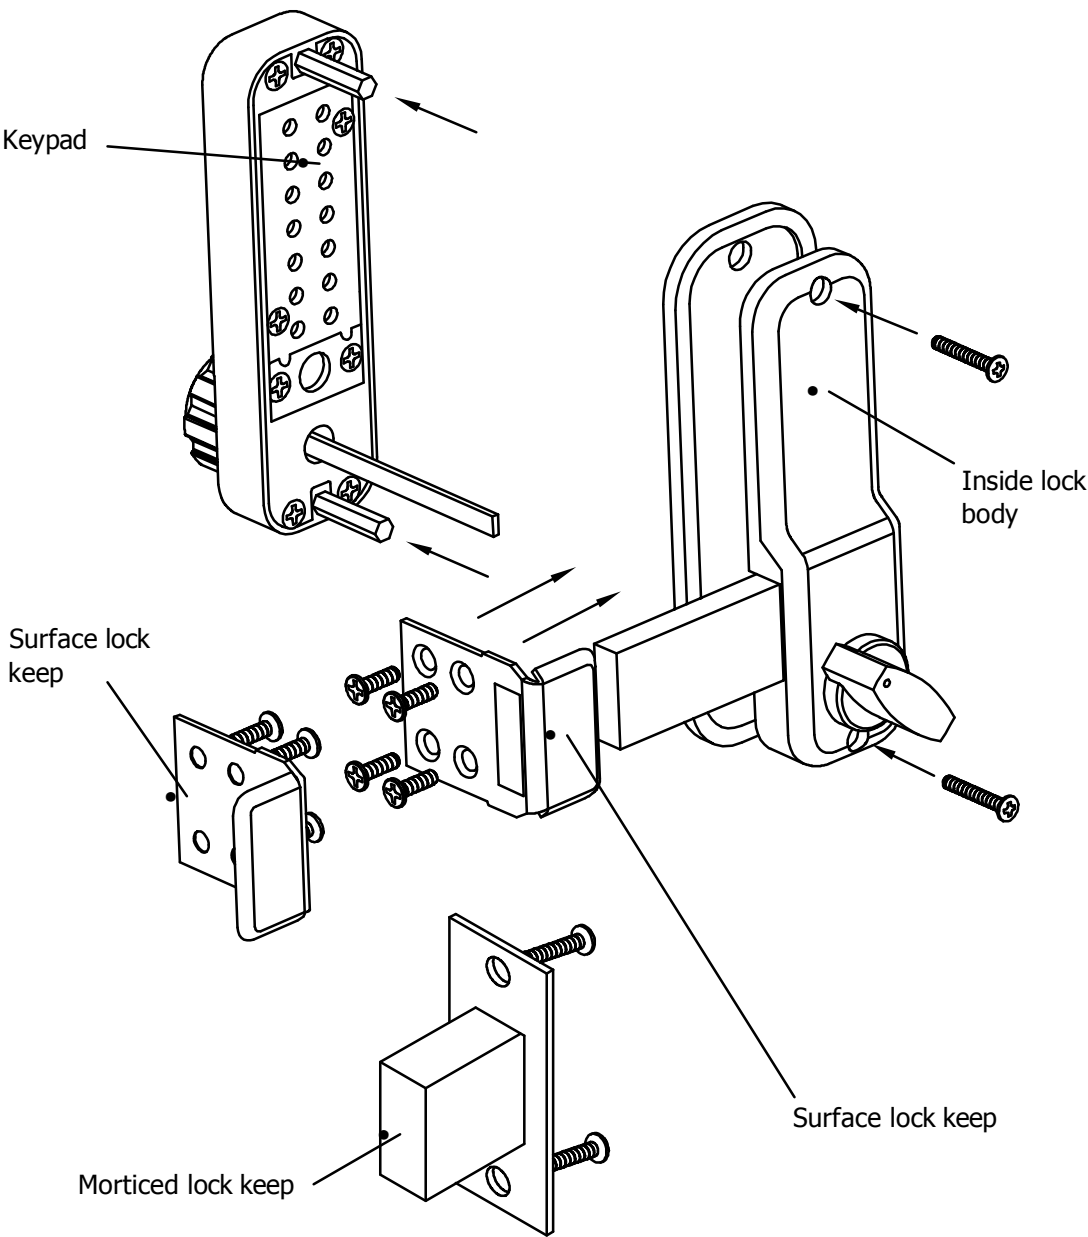

Unscrew the four screws and remove the plate

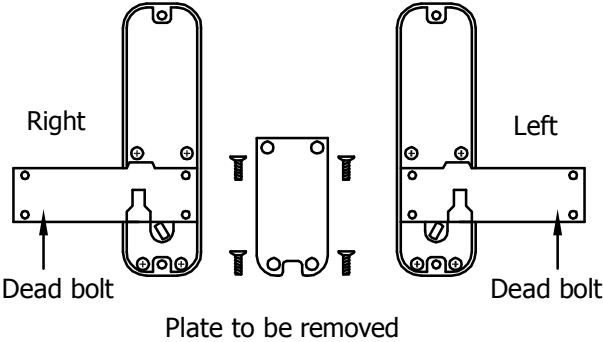



Maintenance Instructions – Applicable for all models

Monthly

Clean the surface of the keypad and all of the exposed elements of the latch assembly with a light spray application of a silicon based lubricant such as GT85 or other. Remove any excess with soft cloth.

Do not use oil based lubricants such as WD40. Oil based products will attract dirt. A Silicon based lubricant will also help to displace water away from the internal mechanisms.

Annually

1. Remove the lock from the door/locking assembly.
2. Spray the inside of the lock with GT85 or other silicon based lubricant through the tumbler holes on the reverse of the keypad. Remove any excess with soft cloth.
3. Spray all of the fixings, accessories and latch with GT85 or other silicon based lubricant.
4. Push each of the buttons and rotate the knob/lever several times to ensure that the lock is working smoothly and that all buttons return to their outward position.

Remarks

The above maintenance procedures can be carried out whenever the operation of the lock is sticky or the code is intermittently accepted. If for whatever reason the above instructions do not solve the problem, please call our help line on **+44 (0) 1708 225700**.

BORG LOCKS UK LTD

9 Upminster Trading Park, Warley Street, Upminster, Essex RM14 3PJ

Tel. +44 (0) 1708 225700 **Fax.** +44 (0) 1708 226338

sales@borglocks.com

www.borglocks.com