

成品尺寸: 34*100MM
料号: 2-0025-0927-00

英文

aspire®



Spryte User Manual

Read this information leaflet fully before you start using this product as it contains important information. The notes below relate to when the device is filled with e-liquid that contains nicotine.

This product is intended for adult smokers. This product is not recommended for non-smokers, young people under the age of 18 years, pregnant or breast feeding women and those experiencing general ill health.



Micro USB Charging Port

Keep out of reach of children and minors!

This product contains nicotine which is a highly addictive substance.

The above warning only applies when this device has been filled with nicotine containing e-liquid

Contents:

- 1* Spryte device
- 2* Extra O rings
- 2* Coils (1*1.8Ω & 1*1.2Ω for Nic Salt)
- 1* Micro USB Cable
- 1* Warranty Card
- 1* User Manual



Specifications

- Spryte Pod capacity: 2ml
- Spryte coil is interchangeable with original CE5 BVC coils
- Built-in Battery Capacity: 650mAh
- Dimensions: 108*26*26mm
- Adjustable airflow
- Coil resistance: 1.8ohm
- Coil type: Nichrome
- Easy bottom fill
- Output wattage: 12W



- When using a new coil, let the pod stand for 5 minutes after filling so the cotton can be saturated with e-liquid before use.
- Do not let the pod become completely empty. Refill the pod to avoid dry burning or damage to the coil.

Spryte Filling

1. Pull and remove the pod from the main body of the Spryte.
2. Invert the pod and place the filling bottle/dropper

3. Push down and squeeze the filling bottle/dropper bulb to add your preferred e-liquid into the pod system.
4. Re-insert the pod into the ower unit, and push down firmly until it 'clicks' into place.



Spryte Coil Installation

1. Pull and remove the pod from the main body of the Spryte.
2. Invert the pod, push down and unscrew to disengage the chimney unit, then remove.
3. Detach the atomizer from the airflow control ring and replace it with a new one.
4. Push down and screw in to relocate the chimney unit back to the pod system.
5. Re-inset the pod into the

power unit, and push down firmly until it 'clicks' into place.

- Note:** 1. To adjust the airflow of the Spryte, please remove the pod and rotate the airflow control ring on bottom of the Spryte pod; 2. When relocating the chimney unit, please screw and push down at the same time.



Instructions

- Pressing the fire button five times within two seconds

will turn the device on or off. The indicator lights will flash blue and red three times to indicate off or on.

- When the Spryte is on, press the fire button the lights will indicate your Spryte current charge. When its current charge capacity is above 3.8 volts the indicator lights will be blue and red. When the charge is between 3.8 and 3.5 volts the lights will be blue only. When the charge drops below 3.5 volts the lights will then become red to remind you that it is time to charge your Spryte.

Protective Features

- Automatic Cutoff: The preset continuous fire time is 15 seconds, after 15 seconds of continuous firing, the LED lights will flash blue and red 10 times and the Spryte will stop firing, it will fire again when the button is pressed.
- Short Circuit Protection: When the Spryte detects a short, it will stop firing, and the LED lights will flash blue and red 3 times .
- Low Voltage Protection: When the battery level drops below 3.2V, the Spryte will not function and the LED lights will flash red 15 times.
- Overcharge Protection: When the Spryte is fully charged, it will stop charging to prevent overcharging of your battery.

- Over heat protection: When the temperature of the control board is above 75 °C/167 °F, will on blue and red for 3 seconds to remind overheat and the Spryte will cut off.

Charging Instructions

- Charge via the Micro USB port. Maximum charge current can reach up to 1000mA.
- When the USB cable is attached the Spryte indicator lights will flash blue and red three times. While charging the LED will indicate the Spryte's current charge status: 3.5 volts or less= red light; 3.5 to 3.8 volts= blue light; 3.8 volts and above =both blue and red lights. When the Spryte is fully charged the LED will flash blue and red 20 times then remain off.

IMPORTANT INFORMATION ABOUT USING NICOTINE CONTAINING E-LIQUIDS

Before using nicotine containing e-liquids the user should read the following information carefully.

NICOTINE CONTAINING E-LIQUIDS:

Do not use if you are allergic to nicotine or any of the other ingredients contained within the e-liquid (see manufacturer's abel for full details).

WARNINGS AND PRECAUTIONS

- Nicotine containing e-liquids are not recommended for:
- Non-smokers
 - Young people under the age of 18 years;
 - Pregnant or breast feeding women; as nicotine is known to cross the placenta and to be excreted in breast milk;
 - Those experiencing general ill health; such as heart disease, stomach and duodenal ulcers, liver or kidney problems, long term throat disease or difficulty breathing due to bronchitis, emphysema or asthma;
 - Those who have an overactive thyroid gland or have a pheochromocytoma(a tumour of the adrenal gland that can affect high blood pressure);
 - Those who have diabetes, as nicotine may affect your blood sugar levels.

POSSIBLE SIDE EFFECTS

If you inhale too much nicotine or use the product too much you may experience one or more of the following effects:

- Feeling faint;
- Nausea (feeling sick)

- Headache
 - Coughing
 - Irritation of the mouth or throat
 - Dizziness
 - Stomach discomfort
 - Hiccups
 - Nasal congestion
 - Vomiting (being sick)
 - Heart palpitations
 - Abnormal heart rate
- If you experience any of these side effects; including any possible side effects not listed in this leaflet, discontinue using the product, if the effect(s) continue after you stop use, consult your doctor or healthcare professional and bring this leaflet to their attention.



2.8mm *Diameter of the pod refill hole.

To learn more about your products and how to use, please visit: www.aspirecig.com

Shenzhen Eigate Technology Co., Ltd.
Building 3, Xinhongtai Industrial Park, 14 Jian'an Rd, Tangwei, Fuyong Town, Bao'an District, Shenzhen, China
Tel: +86-755-81499783
Email: service@aspirecig.com

Manufactured by Eigate MADE IN CHINA

