



## 5500 Series Rotor

Operation Guide

*Instrucciones de Funcionamiento*

*Guia de Operação*


*Manuel d'Instruction*

*Bedienungsanleitung*

*Istruzioni*

*Bedieningshandleiding*

*ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ*

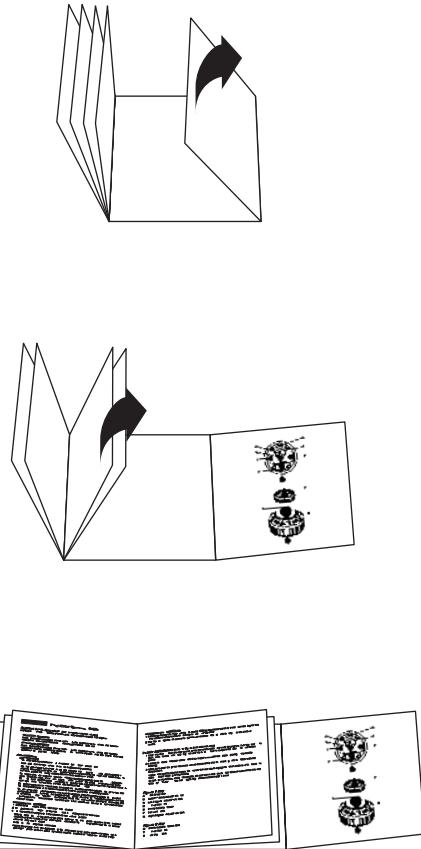

**Rain Bird Corporation**  
Contractor Division  
970 West Sierra Madre  
Avenue, Azusa, CA 91702  
Phone: (626) 963-9311 Fax:  
(626) 812-3411

**Rain Bird Technical Service**  
(800) 247-3782 (U.S. only)

**Rain Bird Corporation**  
Commercial Division  
6991 East Southpoint Road,  
Tucson, AZ 85706  
Phone: (520) 741-6100 Fax:  
(520) 741-6522

[www.rainbird.com](http://www.rainbird.com)

**Rain Bird International, Inc.**  
145 North Grand Avenue,  
Glendora, CA 91741  
Phone: (626) 963-9311 Fax:  
(626) 963-4287



**Full/Part Circle Operation** (Refer to Figure 1 on fold-out page)

All 5500 Series rotors are factory preset to part-circle at approximately 180 degrees.

**Full-Circle Operation**

Insert a flat blade screwdriver into the center adjustment slot on the top of the rotor. Turn the screwdriver clockwise so the blade is aimed toward the full-circle icon.

**Part-Circle Operation**

Insert a flat blade screwdriver into the center adjustment slot on the top of the rotor. Turn the screwdriver counter clockwise so the blade is aimed toward the part-circle icon. Use the following instructions to adjust the arc settings.

**Arc Adjustment****Important facts:**

- The rotor may be adjusted to any arc between 50° - 330° and full circle.
- Both right and left edges of the arc can be independently adjusted.
- One full 360 degree turn of the arc adjustment screw will change the arc edge approximately 120 degrees. Three full turns of the arc adjustment screw will rotate the trip edge completely around to the starting point. This is significantly different than most other rotors.
- The edges of the arc cannot be felt when rotating the nozzle turret by hand. There is a light click sound at the arc edge. If the nozzle turret is rotated past the trip point, another click may be heard. This is the Memory Arc® function activating. No damage has occurred to the rotor. The rotor will click once again as it is turned back into the area between the arc edges.
- The nozzle turret can be rotated by hand at any time in either direction with no damage to the rotor. The nozzle housing may be rapidly advanced by hand to speed the arc setting process.
- The arc of the rotor cannot be set to less than 50 degrees. If the 50-degree minimum is reached during adjustment, a hard stop will be felt on the adjustment screw. To continue moving the arc edge, move the other edge in the same direction first. Then return and continue moving the first edge. If the adjustment screw is forced beyond the fixed stop, it will ratchet and click loudly a few times before damage occurs.

**Setting the arc - Method #1:**

1. Adjust both arc edges of the rotor larger than desired.
2. To adjust the left arc edge, trip the rotor so that it is rotating counter clockwise.
3. Grip the nozzle housing to halt the rotation at the desired trip point.
4. With the rotor aimed at the desired trip point, slowly turn the left adjustment screw in the clockwise direction until the torque of the nozzle turret is eliminated. This is a very subtle feel. The click sound of the trip may also be heard.
5. Verify trip point during normal operation.
6. Repeat the procedure for the right side trip. The rotor must be tripped to rotate clockwise and the right edge adjustment screw should be turned counter clockwise to reduce the arc until it trips.

**Setting the arc - Method #2:**

1. Determine where the edges of the arc are by rotating the nozzle turret by hand and listening for the click sound or observe the trip during operation of the rotor.
2. Use the arc adjustment screws to increase or decrease the arc until the trip is at the desired location.

**Nozzle Installation** (Refer to Figure 2 on fold-out page)

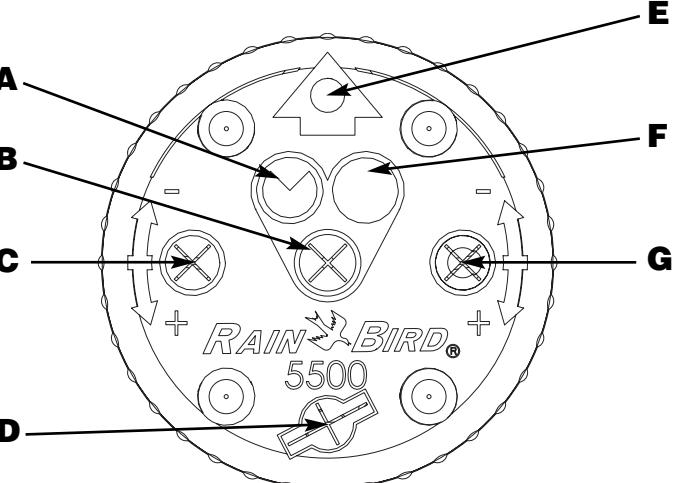
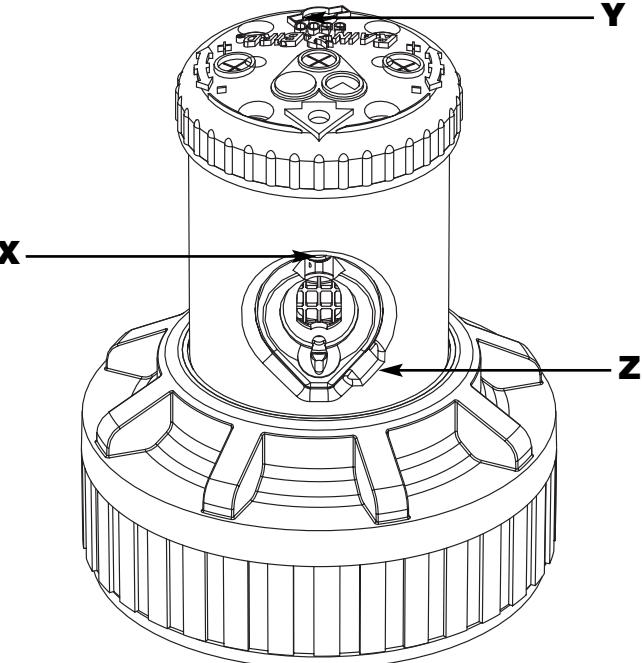
1. Insert the Pull-up Tool into the socket in the top of the rotor and twist 90 degrees. Pull the riser up to gain access to the nozzle opening and use the hold up tool to support the riser in this extended position.
2. Loosen the nozzle retainer screw until it no longer obstructs the nozzle opening in the nozzle housing.
3. Using both thumbs, press the color-coded nozzle firmly into the opening until it is flush with the nozzle turret.
4. Tighten the nozzle retainer screw. The screw threads must engage the front surface of the nozzle to ensure proper seating of the nozzle.
5. To remove the nozzle, loosen the nozzle retainer screw and insert a flat-bladed screwdriver into the Side Pry™ feature on the lower right edge of the nozzle to pry it loose.

**Figure 1 Key**

- A** = Part Circle Icon  
**B** = Full/Part Circle Adjustment Slot  
**C** = Left Edge Arc Adjustment Slot  
**D** = Pull-up Tool Slot  
**E** = Nozzle Retainer Screw  
**F** = Full Circle Icon  
**G** = Right Edge Arc Adjustment Slot

**Figure 2 Key**

- X** = Nozzle Retainer Screw Slot  
**Y** = Pull-up Tool Slot  
**Z** = Side Pry™ Slot

**F1****F2**

## 5500 Series Nozzle Performance

Pressure psi	Nozzle ft.	Radius ft.	Flow GPM	Precip In/h	Precip In/h
30	2	33	1.4	0.25	0.29
	3	35	2.3	0.36	0.42
	4	37	2.6	0.37	0.42
	5	37	3.2	0.45	0.52
	6	37	3.8	0.54	0.62
	8	33	5.4	0.95	1.10
40	2	37	1.6	0.23	0.27
	3	39	2.7	0.34	0.39
	4	41	3.1	0.35	0.41
	5	41	3.8	0.43	0.50
	6	43	4.5	0.47	0.54
	8	39	6.4	0.81	0.94
	10	41	7.5	0.86	0.99
	12	39	9.6	1.21	1.40
50	2	37	1.8	0.26	0.30
	3	41	3.0	0.35	0.40
	4	43	3.5	0.36	0.42
	5	45	4.3	0.41	0.47
	6	45	5.1	0.48	0.56
	8	43	7.3	0.76	0.88
	10	47	7.9	0.69	0.80
	12	45	11.1	1.05	1.22
60	2	37	2.0	0.28	0.32
	3	41	3.4	0.38	0.44
	4	45	3.8	0.36	0.42
	5	47	4.7	0.41	0.48
	6	47	5.6	0.49	0.56
	8	45	8.1	0.77	0.89
	10	51	9.7	0.72	0.83
	12	51	12.3	0.91	1.05

Precipitation Rates based on half-circle operation.

■ Square spacing based on 50% diameter of throw.

▲ Triangular spacing based on 50% diameter of throw.

Performance data collected in zero wind conditions.

Rain Curtain™ nozzles: 2.0 - Orange, 3.0 Red, 4.0 - Black,  
5.0 - Yellow, 6.0 - Light Blue, 8.0 - Dark Green,  
10.0 - Grey, 12.0 - Beige

## 5500 Series Nozzle Performance - METRIC

Pressure Bars	Nozzle m	Radius m	Flow m³/h	Flow l/s	Precip mm/h	Precip mm/h
2,1	2	10,1	0,32	0,09	6,3	7,3
	3	10,7	0,52	0,15	9,2	10,6
	4	11,3	0,59	0,16	9,3	10,7
	5	11,3	0,73	0,20	11,4	13,2
	6	11,3	0,86	0,24	13,6	15,7
	8	10,1	1,23	0,34	24,2	28,0
2,5	2	10,8	0,35	0,10	5,9	6,8
	3	11,4	0,58	0,16	8,9	10,2
	4	12,0	0,66	0,18	9,1	10,5
	5	12,0	0,81	0,23	11,2	12,9
	6	12,4	0,96	0,27	12,5	14,4
	8	11,2	1,37	0,38	21,8	25,2
3,0	2	11,3	0,38	0,11	6,0	6,9
	3	12,1	0,64	0,18	8,7	10,0
	4	12,7	0,74	0,20	9,1	10,5
	5	12,9	0,90	0,25	10,8	12,5
	6	13,3	1,07	0,30	12,1	13,9
	8	12,3	1,53	0,42	20,1	23,2
	10	13,1	1,74	0,48	20,1	23,2
	12	12,5	2,30	0,64	29,3	33,8
3,5	2	11,3	0,41	0,11	6,5	7,5
	3	12,5	0,69	0,19	8,8	10,2
	4	13,2	0,80	0,22	9,2	10,7
	5	13,8	0,98	0,27	10,4	12,0
	6	13,8	1,17	0,32	12,3	14,2
	8	13,2	1,67	0,46	19,3	22,3
	10	14,4	1,83	0,51	17,6	20,3
	12	13,9	2,54	0,71	26,5	30,6
4,0	2	11,3	0,45	0,12	7,0	8,1
	3	12,5	0,75	0,21	9,7	11,2
	4	13,6	0,85	0,24	9,2	10,6
	5	14,2	1,05	0,29	10,4	12,0
	6	14,2	1,25	0,35	12,4	14,3
	8	13,6	1,80	0,50	19,5	22,5
	10	15,3	2,12	0,59	18,1	20,9
	12	15,2	2,74	0,76	23,8	27,4

Precipitation Rates based on half-circle operation.

■ Square spacing based on 50% diameter of throw.

▲ Triangular spacing based on 50% diameter of throw.

Performance data collected in zero wind conditions.

Pressure Bars	Nozzle m	Radius m	Flow m³/h	Flow l/s	Precip mm/h	Precip mm/h
4,5	2	11,6	0,48	0,13	7,1	8,2
	3	12,8	0,80	0,22	9,7	11,2
	4	13,7	0,90	0,25	9,6	11,0
	5	14,3	1,12	0,31	10,9	12,6
	6	14,3	1,33	0,37	13,0	15,0
	8	14,0	1,92	0,53	19,5	22,5
	10	15,9	2,38	0,66	18,9	21,9
	12	15,9	2,94	0,82	23,3	26,9
5,0	2	11,9	0,51	0,14	7,2	8,3
	3	13,1	0,83	0,23	9,7	11,2
	4	13,7	0,95	0,26	10,1	11,6
	5	14,3	1,18	0,33	11,5	13,3
	6	14,5	1,41	0,39	13,4	15,5
	8	14,5	2,04	0,57	19,4	22,5
	10	16,3	2,60	0,72	19,5	22,5
	12	16,3	3,12	0,87	23,4	27,1
5,5	2	11,9	0,52	0,14	7,4	8,5
	3	13,1	0,88	0,25	10,3	11,9
	4	13,7	1,00	0,28	10,6	12,2
	5	14,3	1,25	0,35	12,2	14,0
	6	14,9	1,47	0,41	13,2	15,3
	8	14,9	2,15	0,60	19,3	22,3
	10	16,8	2,74	0,76	19,6	22,6
	12	16,8	3,27	0,91	23,3	26,9
6,0	10	16,8	2,91	0,81	20,7	23,9
	12	16,8	3,45	0,96	24,5	28,3
6,2	10	16,8	2,98	0,83	21,2	24,4
	12	16,8	3,52	0,91	25,1	28,9

Rain Curtain™ nozzles: 2.0 - Orange, 3.0 Red, 4.0 - Black,

5.0 - Yellow, 6.0 - Light Blue, 8.0 - Dark Green,

10.0 - Grey, 12.0 - Beige