

BD-SW-3BC-42**HONDA CBR1000 RR, 2020 onwards, Start – Stop/Run - Rain**
3 button handlebar race switch for fitting directly onto the brake clamp.
Includes SP model

This switch is a direct replacement for the standard Start / Kill switch assembly found on the Honda. Designed for use on race bikes which need an additional latching switch for the rain light, or need to save space on the handlebar.

The rain light is pre-wired into the original brake light wiring circuit so control of the 'stop light' can be achieved simply by pressing the yellow button.

- Red , Stop/Run
- Yellow , Rain light
- Green , Starter


No modification of the bike wiring is necessary, this kit plugs directly into the connector of the standard loom.



www.bikesportdevelopments.co.uk

Function:

RED	RUN/STOP	Latching
GREEN	START	Momentary
YELLOW	RAIN	Latching

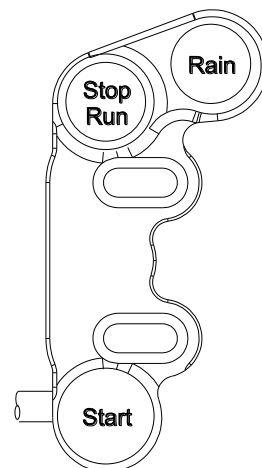**Electrical / Mechanical Characteristics**

Wire..... Type 55 / 24
Switch sealing..... IP67
Housing..... Aluminium
Coating..... Black anodise

Dia (handlebar)22mm (7/8")
Max width 20.5 mm
Min width at centre 20.0 mm
Weight 85 g

Ordering Information

Part No.	Description
BD-SW-3BC-42-xxx	Honda CBR1000 RR right switch set for standard ECU and wiring – 2020 onward xxx - Choose appropriate clamp from the parts listed on page 2. One free clamp per switch assembly xxx – Unless otherwise specified we will supply the BR-A clamp

Mounting

These switches mount directly onto our own brake pump clamp(s) and are adjustable left / right to suit the rider

Several clamps are available to suit most popular brakes

BR-A – 32mm in-line bolts as found on most standard bikes - Locates our switch to the right of the brake mount bolts **

BR-N – 32mm in-line bolts – Locates our switch to the left of the brake mount bolts **

BR-B – 30mm offset bolts to suit Brembo XR / GP brake pump

BR-F – 30mm in-line bolts to suit Accosato / Hel brake pump

BR-J – 32mm offset bolts to suit Beringer brake pump

BR-G - Generic clamp for direct handlebar mounting.

Specify your clamp at the time of ordering. Clamps are sold separately so there is no need to replace the switch if you change your brake pump.

We will supply clamp **BR-A** to suit the standard brake, or you can choose from any one of the above as a free alternative.


** Additional info to help you choose between BR-A and BR-N can be found [here](#).

IMPORTANT

Tighten the UPPER bolt first to achieve metal to metal contact, then use the lower bolt to clamp onto the handlebar – Except BR-F and BR-J which have equal gap for upper and lower



1.0mm of gap – Used for tightening the clamp.
21.5 > 22.2mm dia bar

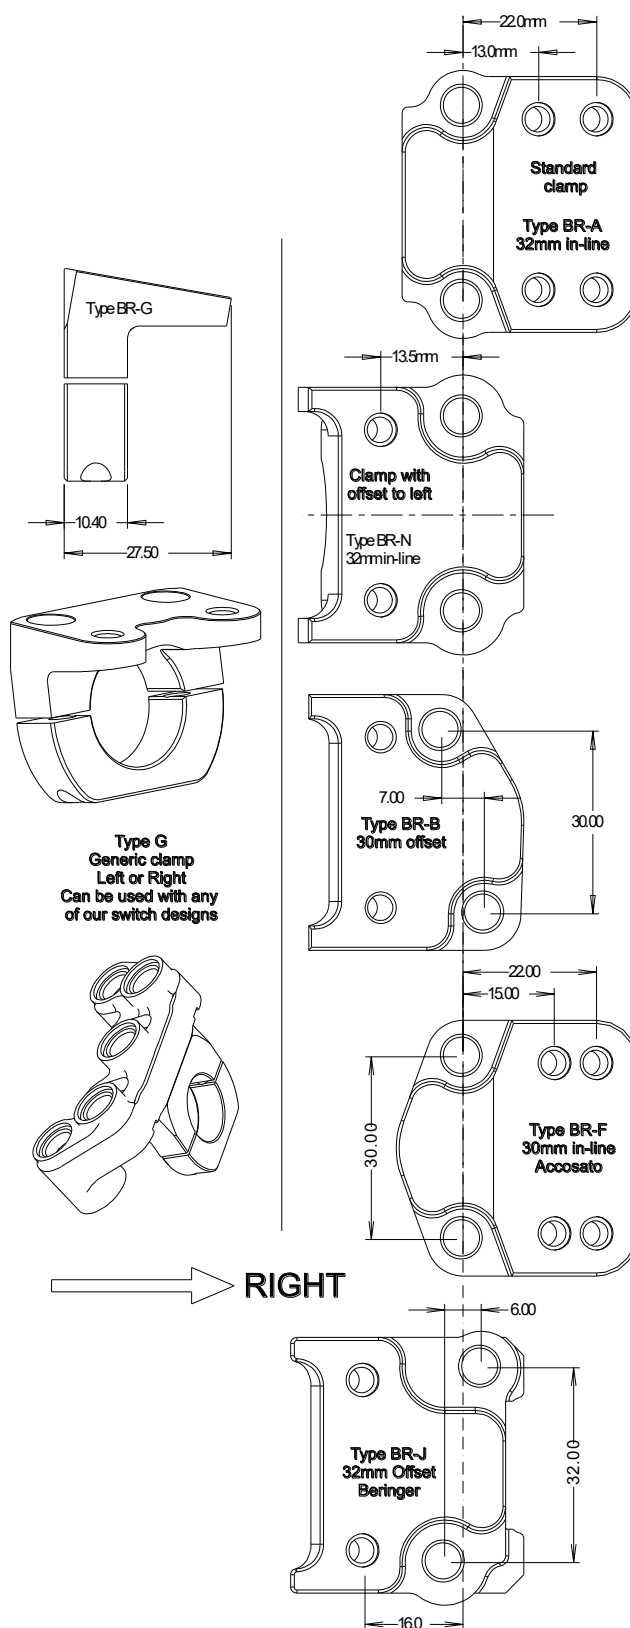

Clamps are also sold separately so there is no need to replace the switch if you change your brake.