

BD_SW_3B_10 Yamaha R1 2009 > 2014 , 3 button right side switch

- **Stop / Run**
- **Starter**
- **Mode**

The aluminium assembly has been designed ultra-slim and encompasses these waterproof switches:

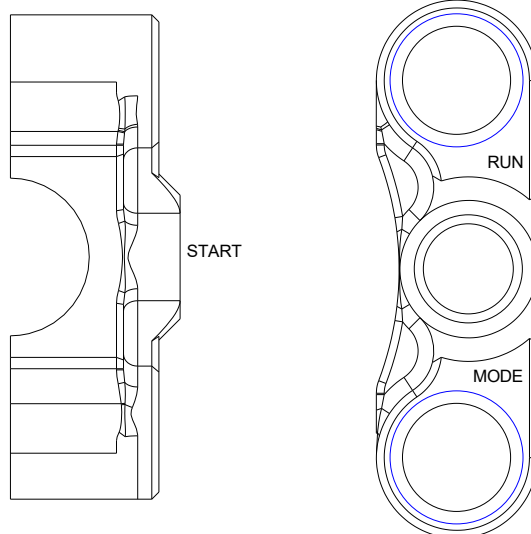
- RED latching (Push On , Push OFF) for stop and run
- Black momentary for the starter switch
- Blue momentary for the Mode function

No modification of the bike wiring is necessary, this kit plugs directly into the 6 and 2 way connectors of the standard loom. Can be used with standard and kit wiring looms.

This switch set also includes the brake switch wiring as a separate component, simply plug these 2 wires into the 2 spare locations of the 6 way block connector. For track bikes which do not need the brake light switch this can be left off.

**Function:**

1	Red	Stop /Run	latching
2	Black	Starter	Momentary
3	Blue	Mode	Momentary

**Electrical / Mechanical Characteristics**

Wire..... Type 55 / 24
Switch sealing..... IP67
Housing.....Aluminium
Coating..... Black anodise

Dia (handlebar)22mm (7/8")
Max width 20.5 mm
Min width at centre 14.5 mm
Weight 85 g

Ordering Information

Part No.	Connector	Cable	Description
BD-SW-3B-10	6 way and 2 way	560mm	3 way handlebar switch for Yamaha R1 2009 > 2014