

aspire®



Tigon AIO User Manual

Innovate the way you vape

SAFETY INFORMATION

For a safe and effective use of this product and its accessories, we advise you to read the following instructions in full, and to strictly observe the operating procedures indicated in this manual and refer to the leaflet contained in the packaging of the individual products / accessories.

This product is intended for adult smokers. This product is not recommended for non-smokers, young people under the legal age, pregnant or breast feeding women and those experiencing general ill health.

Keep the product out of reach of Children and minors at all times

WARNINGS FOR TRANSPORT

Do not keep your device in your pocket while switched on to avoid inadvertently activating the vaporization device, causing irreparable damage.

COMPONENTS OF THE PRODUCT

This product is a high-tech product and its components such as the battery, the micro USB cable, and the tank part have been specifically made for this product. We recommend the exclusive use of components and accessories indicated. Use of components and / or accessories not specifically produced for this device may lead to a malfunction and / or damage to the product and to the cancellation of the guarantee.

WARNINGS BEFORE USE

Products with an internal battery leave the factory already fully charged. Do not recharge it until the remaining charge indicator gives the low battery signal. (See Instructions). The use of an

empty, dry or drained tank/pod can cause immediate damage to the internal resistance and the consequent cancellation of the guarantee.

WARNINGS WHILE DRIVING

While driving, be sure to strictly observe the laws and regulations of the country where you are located; stay focused on driving and pay attention to traffic conditions. Do not use this product while driving a vehicle and keep it separate from other objects in order to avoid damage from bumps.

GENERAL WARNINGS AND LIMITATIONS OF USE

Do not bring your vape device into contact with water or other e-liquid. Avoid exposing the device to too low or too high temperatures (-5 °C / 50 °C). Avoid using the product in overheated or excessively damp environments. Keep the product and its accessories away from heat sources. Use only Aspire original spare parts and accessories. Always discharge the battery completely before recharging. Carefully read the composition of the e-liquid before use, and do not use the product if you are allergic to any of the components of the e-liquid. Do not use the product if you suffer from respiratory and / or cardiovascular system disorders. Do not use the product during pregnancy or lactation.

Do not ingest or swallow any part of the product or its accessories and do not try to open or tamper with the components of the product or its accessories. The device does not need any flame to light it. To avoid performance losses, disconnect the battery from the USB charger when fully recharged, and in the case of anomalies, smell of burnt or abnormal deformation of one of the components of the device or its accessories, stop using it immediately and contact Customer Care.

Avoid direct contact of the e-liquid with the mouth which could happen if you inhale too strong and too frequently or if the tank is too full.

Avoid any unauthorized operations that may damage the product. For an optimal performance of your vape device, it would be advisable to spend at least 30 seconds between one inhalation and the next. We recommend only to use the Aspire wall charger supplied to charge this device and not attempt to recharge the device with any other type of charger. We don't recommend using the product while charging.

Keep the product and its accessories out of reach of children, and dispose of the product components at dedicated collection/disposal points. Do not discard this product in the environment.

Contents:

- 1* Tigon AIO Battery Unit (1300 mAh)
- 1* Tigon AIO Pod (2 ml)
- 2* Coils (1* Tigon Coil 0.4Ω & 1* Tigon Mesh Coil 0.7Ω)
- 1* Type-C Cable
- 1* User Manual
- 1* Warranty Card

Tigon AIO Component View:



Specifications:

- Pod capacity: 2ml
- Built-in battery capacity: 1300 mAh
- Dimensions: 31.5*24*109.5 mm
- Airflow adjustable on surface
- Coil parameters:
 - Tigon Coil 0.4Ω 23-28W nichrome
 - Tigon Coil 0.7Ω 20-25W kanthal AF (mesh coil)
- Bottom fill pod
- Bypass output mode


Coil Installation:

1. Twist clockwise to release the pod;
2. Invert the pod and pull to remove the used coil;
3. Insert a new coil into the chamber;
4. To replace the pod, align the catch into the groove on the top of the main body and twist anticlockwise to fix the pod.



Tank Filling:

1. Twist clockwise to release the pod;
2. Invert the pod and lift the silicon seal;
3. Add your preferred e-liquid through the filling hole;
4. Close the silicon seal firmly;
5. To replace the pod, align the catch into the groove on the top of the main body and twist anticlockwise to fix the pod.

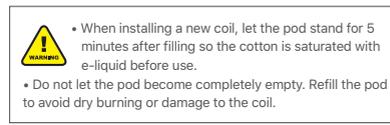

Instructions:

- Pressing the fire button five times quickly will turn the device on or off. The LED light will flash white 3 times to indicate on or off.
- When the Tigon AIO is in use, the color of the LED light will indicate your device's current charge. Green means the current battery level is above 3.8 volts (60-100%). Blue means the current battery level is between 3.5 and 3.8 volts (30-60%). When the charge drops below 3.5 volts (0-30%) the light will then turn red to remind you that it is time to charge your Tigon AIO.

Protective Features:

- Automatic Cutoff: The preset continuous fire time is 10 seconds, after 10 seconds of continuous firing, the LED light will flash purple 10 times and the device will stop firing.
- Short Circuit Protection: When the device detects a short, it will stop firing, and the LED light will flash purple 3 times.

- Low Voltage Protection: When the battery level drops below 3.2V, the device will not function and the LED light will flash red 15 times to remind you to charge your Tigon AIO.
- Overcharge Protection: When the Tigon AIO is fully charged, it will stop charging to prevent overcharging of your battery.
- Over Heat Protection: When the temperature of the chip is above 75 °C/167 °F, the LED light will be yellow for 3 seconds and the Tigon AIO will cut off.

Charging Instructions:

- Charge via the type-C port. Maximum charge current can reach up to 2A, we recommend using the 5V/2A output wall adaptor.
- When the type-C cable is attached, the LED light will flash red 3 times. While charging, the LED will indicate the device's current charge status: 3.5 volts or less (0-30%) = red light; 3.5 to 3.8 volts (30-60%) = blue light; 3.8 volts and above (60-100%) = green light. When the Tigon AIO is fully charged, the LED will flash green 20 times then remain off. When unplug the USB cable, the LED will flash green 3 times.

IMPORTANT INFORMATION ABOUT USING NICOTINE CONTAINING E-LIQUIDS

Before using nicotine containing e-liquid the user should read the following information carefully.

NICOTINE CONTAINING E-LIQUID:

Do not use if you are allergic to nicotine or any of the other ingredients contained within the e-liquid (see manufacturer's label for full details).

WARNINGS AND PRECAUTIONS:

- Nicotine containing e-liquid are not recommended for:
- Non-smokers
 - Young people under the legal age;
 - Pregnant or breast-feeding women; as nicotine is known to cross the placenta and to be excreted in breast milk;
 - Those experiencing general ill health; such as heart disease, stomach and duodenal ulcers, liver or kidney problems, long term throat disease or difficulty breathing due to bronchitis, emphysema or asthma;
 - Those who have an overactive thyroid gland or have a pheochromocytoma (a tumor of the adrenal gland that can affect high blood pressure);
 - Those who have diabetes, as nicotine may affect your blood sugar levels.
 - Those taking the following medication;
 - Theophylline (to treat breathing problems)
 - Ropinirole (to treat restless leg syndrome)
 - Clozapine (to treat schizophrenia)

POSSIBLE SIDE EFFECTS:

If you inhale too much nicotine or use the product too much you may experience one or more of the following effects:

- Feeling faint;
- Nausea (feeling sick)
- Headache
- Coughing
- Irritation of the mouth or throat
- Dizziness
- Stomach discomfort
- Hiccups
- Nasal congestion
- Vomiting (being sick)
- Heart palpitations
- Abnormal heart rate

If you experience any of these side effects; including any possible side effects not listed in this leaflet, discontinue using the product, if the effect(s) continue after you stop use, consult your doctor or healthcare professional and bring this leaflet to their attention.

Safety note:

To avoid misfiring always ensure you either lock or switch off your device when it is not in use. Especially when carrying your device in your pocket, bag or purse.



Shenzhen Eigate Technology Co., Ltd.

Floor 1-4, Building 3, No.14 Jian'an Road, Shajing Sub-district, Bao'an District, Shenzhen, Guangdong Province, China
 Tel: +86-755-81499783
 Email: service@aspirecig.com

To learn more about our products and how to use, please visit: www.aspirecig.com



Manufactured By Eigate
MADE IN CHINA

